

PVC FLOORING INSTALLATION

SUBFLOOR INSPECTION

Subfloor inspection is the responsibility of the installer. It protects yourself against claims and technical problems.

The installer need to carry out all necessary subfloor tests prior to flooring installation, and ensure the unqualified subfloor can be repaired, to meet the install requirement.

If the customer refuse to repair the defect of subfloor, the installer should refuse to continue installation.
The time to repair the flooring system must be quite more than repair the subfloor!

Temperature

15-35 degree centigrade

Humidity

- Moisture percentage of subfloor should be less than 4% RH
(If the value is higher than 8%, stop installation)
- Moisture percentage of air should be 20%-75% RH

Hardness

Making lines on subfloor by using nicking board and nicking tool, the subfloor need to fix if there are 1/3 acute angle intersections are damaged (total 18 acute angle intersections)



Flatness

Height difference between each two meters must be less than 2mm

