

FAQ

HOW TO DEAL WITH SELF-LEVELING CRACKING

Cause the flooring hollowing and edge warping, because self-leveling hollowing.

Reason analysis

- Subfloor is too soft
- There are pipes joints or deformation joints under self-leveling
- Still have elastic objects on subfloor, such as residual glue
- Subfloor is not flat, may has slopes
- Air flow is too fast at construction site
- The thickness of self-leveling is too thick
- Sudden temperature change
- Product own problem, such as low-intensity self-leveling or expired self-leveling

Measures to avoid

Analysis the type of subfloor and choose suitable self-leveling under standard construction

Solution

- Re-install self-leveling (there are both crack and hollowing)
- Polish self-leveling (there is only crack and no hollowing)

