

FAQ

HOW TO DEAL WITH SELF-LEVELING HOLLOWING

Cause flooring hollowing, because the self-leveling bond is not strong.

Reason analysis

- Subfloor is too soft
- Subfloor is too smooth, haven't been polished
- There is wax, oil or other stain on subfloor
- Subfloor belongs to non-absorbent, but choose absorbent primer
- Expired primer
- Primer is not incomplete sealed
- Self-leveling dehydrate too fast
- Primer is not dry
- Product own problem, such as high shrinkage rate or expired self-leveling

Measures to avoid

Analysis the type of subfloor, polish and clean, then choose suitable prime.

Solution

- Remove and re-install self-leveling

