

# FAQ

## HOW TO DEAL WITH SELF-LEVELING HOLLOWING

Cause self-leveling hollowing, because the self-leveling intensity is not good

### Reason analysis

- Subfloor is too soft
- Primer is not incomplete sealed
- Primer is not dry
- Expired primer
- Low temperature cause primer can not come into a film
- Haven't remove the bubbles in self-leveling

### Measures to avoid

Coat more primer, install under proper temperature, primer need totally dry.

### Solution

- Repair with high-strength putty
- Remove and re-install self-leveling (if hollowing happened)
- Polish (if no hollowing happened)

