


PVC FLOORING INSTALLATION

STICK FLOORING

To avoid color difference, installer need to check the flooring colors first. If there have two batch of products with color difference, install them in different areas.

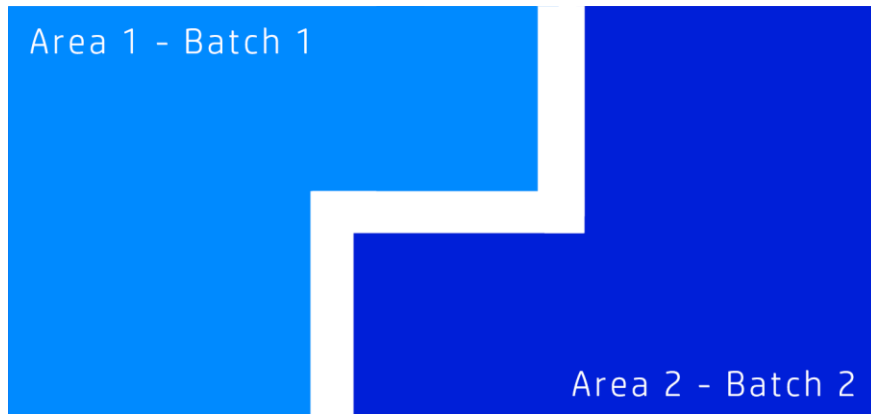

Normally install the sheet flooring perpendicular to the wall, according to the light direction.

- A hook type knife is better a straight type knife
- Double check scratch, color difference, stains, crease on flooring
- Install from the middle of the construction site (big area), never install from the wall
- Use a 30KG or 50KG press roller venting the air between self-leveling and flooring
- Welding the gap between each flooring pieces after 24 hours

Tools

- Safety knife
- Cork board
- Small/big single-wheel press roller
- Double-wheel press roller
- 30kg/50kg press roller

