

FAQ

HOW TO DEAL WITH UNEVEN FLOORING ROLLS


Pre-installation

To make the flooring rolls adapt construction site condition, it should have a pre-installation process.

- Make sure the subfloor is smooth, hard, clean and dry
- Pave an effective damp proof membrane on subfloor
- Open the package, put the flooring in one pile (surface to surface, bottom to bottom, at least 20 layers)

The flooring must be allowed to acclimatize 24 hours before installation and the room temperature need to be between 18-24 degree centigrade.

Flooring surface
Flooring bottom

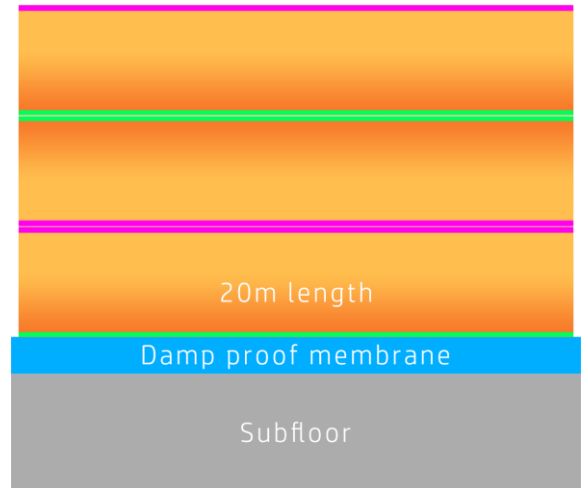

Deal with the situation during installation

- Warming the construction site by using air conditioner
- Use welding gun to heat the flooring before installation
- Use welding gun to heat the uneven area and use cork board to press, make the flooring stick close to adhesive
- Use press roller venting the air between self-leveling and flooring after installation



Homogeneous vinyl flooring sheet do not have fiber-glass layer in its structure, it is easy affected by the external environment, at the same time, it is easy recover.